


# Qwiic Accelerometer (MMA8452Q) Hookup Guide


SEN-14587

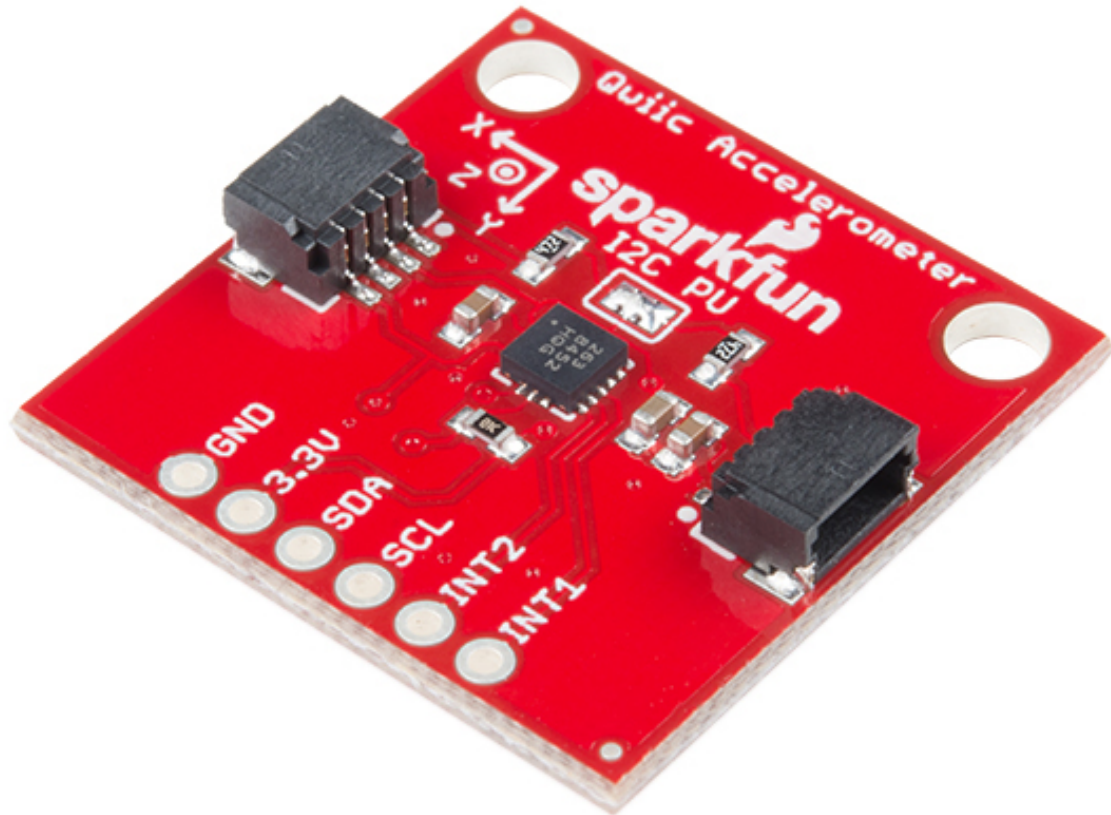

# Qwiic Micro OLED Hookup Guide

## Introduction

Freescale's MMA8452Q is a smart, low-power, three-axis, capacitive micro-machined accelerometer with 12 bits of resolution. It's perfect for any project that needs to sense orientation or motion. We've taken that accelerometer and stuck it on a Qwiic-Enabled breakout board, in order to make interfacing with the tiny, QFN package a bit easier. It's part of SparkFun's Qwiic system, so you won't have to do any soldering to figure out how things are oriented.

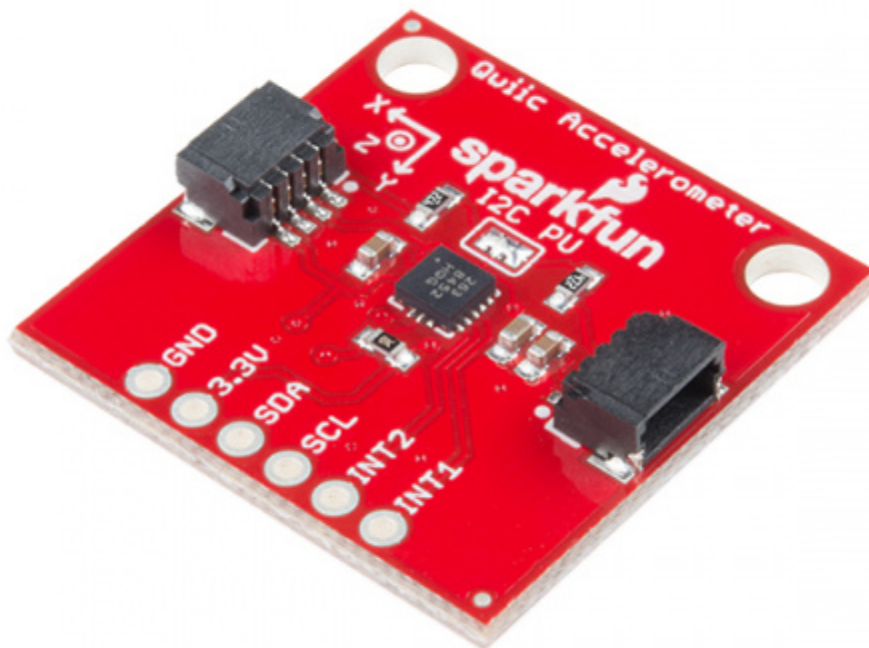

[SparkFun Triple Axis Accelerometer Breakout - MMA8452Q \(Qwiic\)](#)  
SEN-14587

The MMA8452Q is a rock-solid, feature rich, 3-axis accelerometer. It supports three, selectable sensing ranges:  $\pm 2g$ ,  $4g$ , or  $8g$ . It also sports features like orientation detection, single and double-tap sensing, and low power modes. It's a digital sensor -- communicating over a Qwiic enabled I2C interface -- so you'll get reliable, noise-free data over a Qwiic enabled I2C port.

In this hookup guide, we'll connect our sensor up to our microcontroller of choice and read the X, Y, and Z accelerometer channels to figure out how we are accelerating in those

directions. Then, we'll figure out how to use orientation detection to figure out what orientation the sensor is in.

## Required Materials

To get started, you'll need a microcontroller to, well, control everything.

- [SparkFun ESP32 Thing](#)
- [SparkFun RedBoard - Programmed with Arduino](#)
- [Particle Photon \(Headers\)](#)
- [Raspberry Pi 3](#)

Now to get into the Qwiic ecosystem, the key will be one of the following Qwiic shields to match your preference of microcontroller:

- [SparkFun Qwiic HAT for Raspberry Pi](#)
- [SparkFun Qwiic Shield for Arduino](#)
- [SparkFun Qwiic Shield for Photon](#)

You will also need a Qwiic cable to connect the shield to your OLED, choose a length that suits your needs.

- [Qwiic Cable - 100mm](#)
- [Qwiic Cable - 500mm](#)
- [Qwiic Cable - 50mm](#)
- [Qwiic Cable - 200mm](#)

## Suggested Reading

If you aren't familiar with the Qwiic system, we recommend reading [here for an overview](#).



[Qwiic Connect System](#)

We would also recommend taking a look at the following tutorials if you aren't familiar with them.

- [Introduction to I2C](#): One of the main embedded communications protocols in use today.
- [Qwiic Shield for Arduino & Photon Hookup Guide](#) Get started with our Qwiic ecosystem with the Qwiic shield for Arduino or Photon.

## Hardware Overview

Let's look over a few characteristics of the [MMA8452Q sensor](#) so we know a bit more about how it behaves.

Characteristic	Range
Operating Voltage	1.95V - 3.6V
Current	7-165 $\mu$ A
Measurement Range	$\pm$ 2g, $\pm$ 4g, $\pm$ 8g
I2C Address	0x1D (open jumper, default) or 0x1C (closed jumper)

## Pins

The characteristics of the available pins on the MMA8452Q are outlined in the table below.


Pin Label	Pin Function	Input/Output	Notes
3.3V	Power Supply	Input	Should be between 1.95 - 3.6V
SDA	I2C Data Signal	Bi-directional	Bi-directional data line. Voltage should not exceed power supply (e.g. 3.3V).

SCL	I2C Clock Signal	Input	Master-controlled clock signal. Voltage should not exceed power supply (e.g. 3.3V).
INT2	Interrupt 2	Output	Programmable interrupt – can indicate data ready, orientation change, tap, and more.
INT1	Interrupt 1	Output	Programmable interrupt – can indicate data ready, orientation change, tap, and more.
GND	Ground	Input	0V/common voltage.

## Optional Features


### Pull-Up Resistors Jumper

The Qwiic Accelerometer has onboard I2C pull up resistors; if multiple sensors are connected to the bus with the pull-up resistors enabled, the parallel equivalent resistance will create too strong of a pull-up for the bus to operate correctly. As a general rule of thumb, disable all but one pair of pull-up resistors if multiple devices are connected to the bus. If you need to disconnect the pull up resistors they can be removed by removing the solder on the corresponding jumpers highlighted at right.

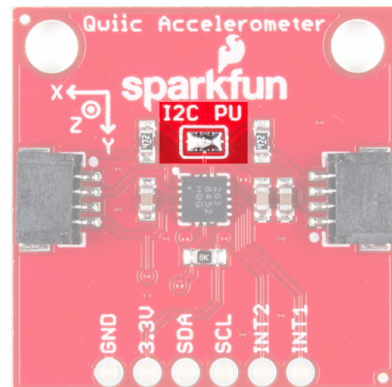


### Address Select Jumper

There is an additional jumper on the back of the board that allows the I2C to be changed from the default 0x1D to 0x1C if you have multiple accelerometers on the same I2C bus. However, if you have more than 2 accelerometers, you'll need the [Qwiic Mux](#) to have them all on the same I2C bus. The jumper is highlighted at right. Normally open, the jumper sets the I2C address to 0x1D. Closing the jumper with solder will give an I2C address of 0x1C.

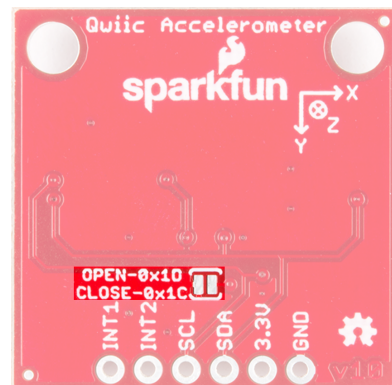

## Axis Reference


Also be sure to check out the labeling on the back of the board that indicates the orientation of the positive X, Y, and Z axes so you know what exactly your data means.

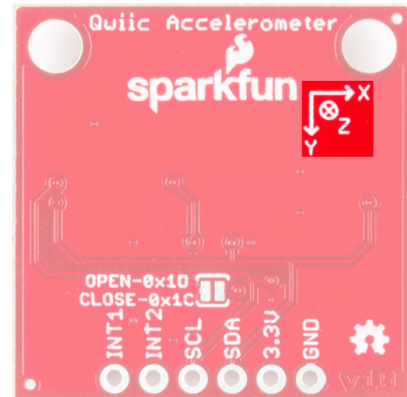

## Hardware Assembly

If you haven't yet assembled your Qwiic Shield, now would be the time to head on over to that tutorial. With the shield assembled, Sparkfun's new Qwiic environment means that connecting the sensor could not be easier. Just plug one end of the Qwiic cable into the Accelerometer breakout, the other into the Qwiic Shield of your choice and you'll be ready to

upload a sketch and figure out how your board is moving around. It seems like it's too easy to use, but that's why we made it that way!

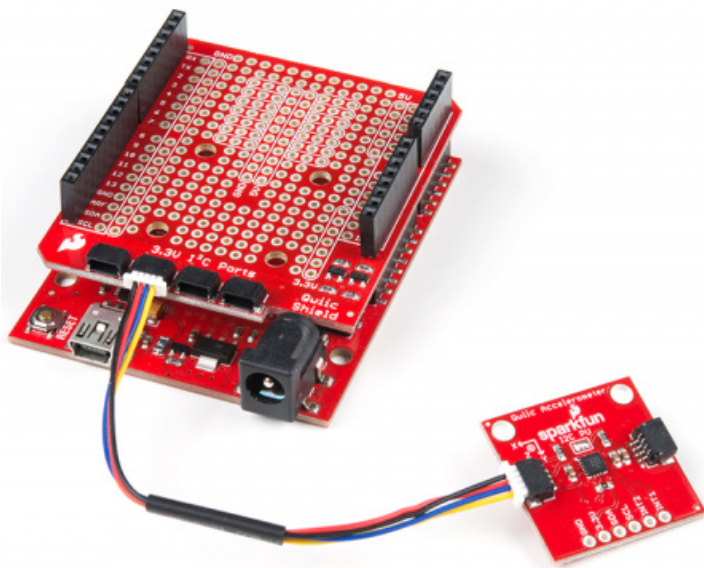

## Example Code


**Note:** This example assumes you are using the latest version of the Arduino IDE on your desktop. If this is your first time using Arduino, please review our tutorial on [installing the Arduino IDE](#). If you have not previously installed an Arduino library, please check out our [installation guide](#).

We've written an Arduino library to make interfacing with the MMA8452Q as easy as can be. Click on the button below to download the library. Or you can grab the latest, greatest version over on the library's GitHub repository.

- [MMA8452Q Arduino Library \(Zip\)](#)

## Load Up the Example Sketch


Once you've installed the SFE\_MMA8452Q library, restart Arduino. Then go to File > Examples > SFE\_MMA8452Q > MMA8452Q\_Basic to open the example sketch.

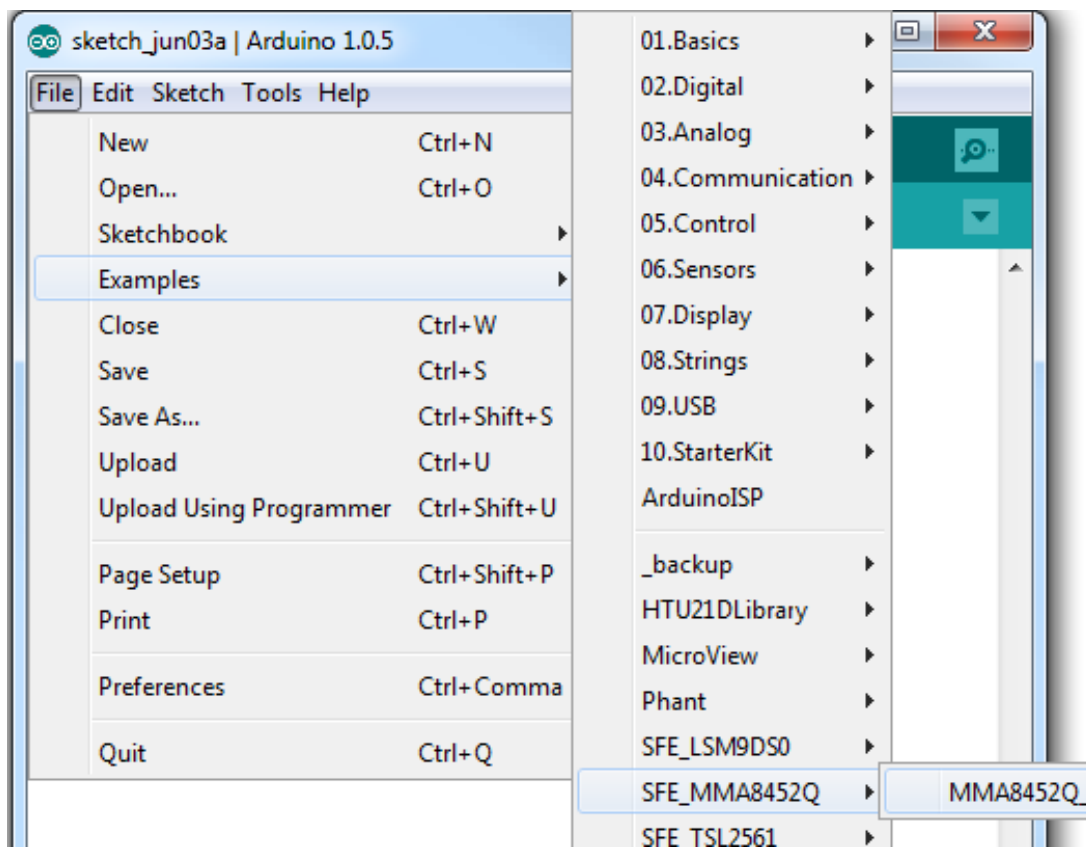



Once you've set your Board and Serial Port, upload the sketch to your Arduino. Then open the [serial monitor](#). You'll begin to see acceleration values stream by, in addition to some information about the sensor's orientation.

Try moving the sensor around to change those values. If it is motionless, flat on the desk, then an acceleration of 1g should be felt on the z-axis, while the others feel around 0. Test the other axes by rotating the board and making them feel the pull of gravity.

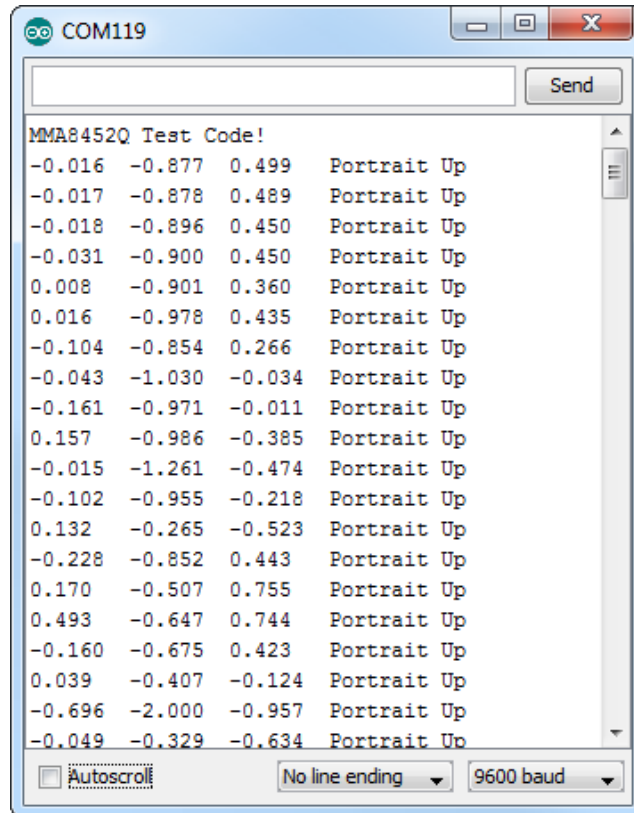

The screenshot shows the Arduino Serial Monitor window titled "COM119". The window contains a text area with the following output:

```
MMA8452Q Test Code!  
-0.016 -0.877 0.499 Portrait Up  
-0.017 -0.878 0.489 Portrait Up  
-0.018 -0.896 0.450 Portrait Up  
-0.031 -0.900 0.450 Portrait Up  
0.008 -0.901 0.360 Portrait Up  
0.016 -0.978 0.435 Portrait Up  
-0.104 -0.854 0.266 Portrait Up  
-0.043 -1.030 -0.034 Portrait Up  
-0.161 -0.971 -0.011 Portrait Up  
0.157 -0.986 -0.385 Portrait Up  
-0.015 -1.261 -0.474 Portrait Up  
-0.102 -0.955 -0.218 Portrait Up  
0.132 -0.265 -0.523 Portrait Up  
-0.228 -0.852 0.443 Portrait Up  
0.170 -0.507 0.755 Portrait Up  
0.493 -0.647 0.744 Portrait Up  
-0.160 -0.675 0.423 Portrait Up  
0.039 -0.407 -0.124 Portrait Up  
-0.696 -2.000 -0.957 Portrait Up  
-0.049 -0.329 -0.634 Portrait Up
```

At the bottom of the window, there are three controls: an unchecked "Autoscroll" checkbox, a "No line ending" dropdown menu, and a "9600 baud" dropdown menu.

## Using the SFE\_MMA8452Q Library

Here are some tips on using the MMA8452Q Arduino library so you can embed it into an Arduino sketch of your own.

Include the Library (Global)

To begin, you need to "include" the library in your sketch:

```
#include <Wire.h> // Must include Wire library for I2C  
  
#include <SFE_MMA8452Q.h> // Includes the SFE_MMA8452Q library
```

The library also requires that you include `Wire.h` in your sketch. Make sure you include that before you include the `SFE_MMA8452Q.h` file.



## Create an MMA8452Q Object (Global)

Once the library is included, you can create an MMA8452Q object. This line of code will do it for you:

```
MMA8452Q accel; // Default MMA8452Q object create. (Address = 0x1D)
```

Optionally, you can define the 7-bit **I<sup>2</sup>C address** of your MMA8452Q in this parameter, using one of these lines of code:

```
MMA8452Q accel(0x1C); // Initialize the MMA8452Q with an I2C address of  
0x1C (SA0=0)
```

```
MMA8452Q accel(0x1D); // Initialize the MMA8452Q with an I2C address of  
0x1D (SA0=1)
```

But if you've left the [address jumper](#) untouched (meaning the "SA0" pin is connected to VCC), you can call the default (no parameter) constructor shown earlier.

## Initialize the MMA8452Q (Setup)

Finally, in the `setup()` function of your sketch, you can initialize the accelerometer using the `init()` function. The `init()` function verifies communication with the accelerometer, and sets up the **full-scale range** and **output data rate**.

Again, you have a few options here. You can use a simple declaration like below. This will initialize the accelerometer with range of **±2g** and an output data rate of **800 Hz** (turns the accelerometer up to the max!):

```
accel.init(); // Default init: +/-2g and 800Hz ODR
```

If you want to specify the acceleration and output data rate, you can instead use an `init()` function like this:

```
accel.init([scale], [odr]); // Init and customize the FSR and ODR
```

Scale can be either `SCALE_2G`, `SCALE_4G`, or `SCALE_8G`. The "odr" variable can be either `ODR_800`, `ODR_400`, `ODR_200`, `ODR_100`, `ODR_50`, `ODR_12`, `ODR_6`, or `ODR_1`, respectively setting the data rate to 800, 400, 200, 100, 50, 12.5, 6.25, or 1.56 Hz.

## Reading and Using Values

Once you've set the accelerometer up, you can immediately start reading the data coming out of the chip. Reading and using the values is a two-step process. First, call the `read()` function to pull in the values.

```
accel.read(); // Update accelerometer data
```

After you've called the `read()` function, you can use either of two sets of values to use the data. Reading from the `x`, `y`, and `z` class variables will return a signed 12-bit integer read straight out of the accelerometer.

```
xAcceleration = accel.x; // Read in raw x-axis acceleration data  
  
Serial.print("Acceleration on the x-axis is ");  
  
Serial.println(xAcceleration);
```

Or, if you want a value with physical units, you can use the `cx`, `cy`, and `cz` class variables. These are the calculated acceleration values read out of the accelerometer; they'll be in units of g's.

```
zAcceleration = accel.cz; // Read in calculated z-axis acceleration  
  
Serial.print("Acceleration on the z-axis is: ");  
  
Serial.print(zAcceleration);  
  
Serial.println(" g's");
```

Remember! Those variables are only updated after the `read()` function is called. Make sure that happens before you start using acceleration values.

## Reading Portrait/Landscape

The MMA8452Q has all sorts of nifty, extra features, one of which is **orientation detection** — it can estimate if it's being held in landscape mode, portrait mode, or flat.

To read the portrait/landscape data from the accelerometer, use the `readPL()` function. This function returns a byte, which will either be equal to `PORTRAIT_U`, `PORTRAIT_D`, `LANDSCAPE_R`, `LANDSCAPE_L`, or `LOCKOUT`.

```
byte pl = accel.readPL();

switch (pl)
{
  case PORTRAIT_U:
    Serial.print("Portrait Up");
    break;
  case PORTRAIT_D:
    Serial.print("Portrait Down");
    break;
  case LANDSCAPE_R:
    Serial.print("Landscape Right");
    break;
  case LANDSCAPE_L:
    Serial.print("Landscape Left");
    break;
  case LOCKOUT:
    Serial.print("Flat");
    break;
}
```

As in the example above, you can use if or switch statements to check which orientation your accelerometer is in.

## Resources and Going Further

Thanks for reading! We're excited to see what you build with the MMA8452Q. If you're left needing more MMA8452Q-related documentation, check out some of these resources:

- [Qwiic MMA8452Q Schematic \(PDF\)](#) -- PDF schematic of the Qwiic MMA8452Q breakout board.
- [Qwiic MMA8452Q Eagle Files \(ZIP\)](#) -- PCB design files for the Qwiic MMA8452Q Breakout board.
- [Qwiic Landing Page](#)
- [MMA8452Q Datasheet \(PDF\)](#) -- Loads of information about the MMA8452Q's electrical characteristics, registers, communication specifications, and more.
- [Qwiic MMA8452Q GitHub Repo](#) -- Design files and example code all related to the MMA8452Q.
- [Library GitHub Repo](#)
  - [Arduino Library](#) - Arduino library for MMA8452Q.
  - [Photon Library](#) - Photon library for MMA8452Q.
- [SFE Product Showcase](#)

Need some inspiration for your next project? Check out some of these related tutorials:

### Dungeons and Dragons Dice Gauntlet

A playful, geeky tutorial for a leather bracer that uses a LilyPad Arduino, LilyPad accelerometer, and seven segment display to roll virtual 4, 6, 8, 10, 12, 20, and 100 side dice for gaming.

### Das Blinken Top Hat

A top hat decked out with LED strips makes for a heck of a wedding gift.

### Blynk Board Washer/Dryer Alarm

How to configure the Blynk Board and app to notify you when your washer or dryer is done shaking.

### Raspberry Pi Zero Helmet Impact Force Monitor

How much impact can the human body handle? This tutorial will teach you how to build your very own impact force monitor using a helmet, Raspberry Pi Zero, and accelerometer!

